



UltimateAir Products

*Wall Termination Vents for 6", 7", and 8" Diameter Duct Sizes
Installation Recommendations*



UltimateAir™ Products
a division of
Stirling Technology, Inc.
178 Mill Street
Athens, Ohio 45701
www.ultimateair.com
info@ultimateair.com



User Recommendations

Thank you for purchasing the Wall Termination Vent Hoods for use with your *UltimateAir™ RecoupAerator® 200DX*. Installers should use the following recommendations for proper installation of your termination vent hoods.

RECOMMENDATIONS:

- Ducts from your *RecoupAerator®* to the outside of your home or business must be insulated to avoid excess condensation (R-4.2 to R-7 is recommended by climate).
- Outside termination vents of fresh air intake and exhaust ducts should be at least 6 feet apart to minimize re-circulation of exhaust air and hoods should be at least 18 inches above grade or snow level.
- Vents should be in a location where they can be accessed for cleaning and away from sources of bad air such as garages, dryer exhaust, and furnace exhaust.
- Vents should be angled down and away from each other.
- A length of 6", 7", or 8" diameter hard duct (not provided) should be used to connect the vent hoods through the band joist or wall to the inside ducting.
- Make sure that joints between termination vents and wall are caulked against rain and air and that ducting is securely sealed to termination vents with UL recognized tapes and sealants that are approved for your type of duct installation. **DO NOT USE DUCT TAPE!**
- Termination vent hoods can also go in the eaves or through the roof.
- Keep duct runs as short as possible and size ducts according to Manual D.
- Make sure that interface between band joists and inside ducts are well insulated and sealed to prevent condensation build-up and air leakage.
- The outside diameters of the vent duct couplers are given on the following page so that a hole can be made to the outside through an exterior wall.
- Mounting plate dimensions are also given below so that your termination vent can be securely fastened to the outside wall of your home or business.
- Use attached decal to clearly identify the hood that will be used as the "Fresh Air Inlet".

MOUNTING DIMENSIONS:

6" Termination Vent Dimension

Outside Diameter of Vent Duct Coupler	6 1/4" dia.
Width of Vent Mounting Plate	9 7/8"
Height of Vent Mounting Plate	10 3/4"

7" Termination Vent Dimension

Outside Diameter of Vent Duct Coupler	7 1/8" dia.
Width of Vent Mounting Plate	11 1/2"
Height of Vent Mounting Plate	12 5/8"

8" Termination Vent Dimension

Outside Diameter of Vent Duct Coupler	8 1/8" dia.
Width of Vent Mounting Plate	11 1/2"
Height of Vent Mounting Plate	12 5/8"