

## CEILING BOOT & DIFFUSER INSTALL INSTRUCTIONS



**1) CHOOSE LOCATION ON CEILING. MARK HOLE WITH THIS TEMPLATE. CUT HOLE.**



**2) PULL FLEX DUCT DOWN THRU HOLE AND ATTACH REGISTER BOOT WITH CABLE TIE PROVIDED.**



**3) INSERT QUICK ZIPS IN 4 ZIP RECEPTOR BLOCKS WITH HEADS OF ZIPS ABOVE BOOT FLANGE. PUSH HEADS OF ZIPS AND REGISTER BOOT BACK UP INTO CEILING HOLE UNTIL FLANGE TOUCHES CEILING.**




**4) GRASP TAIL OF EACH QUICK ZIP AND PULL DOWN TO SECURE REGISTER BOOT TO CEILING—SNIP OFF END OF QUICK ZIPS AT FLANGE.**



**5) INSERT EASY ATTACH KNOB IN CENTER OF CEILING GRILLE AND LINE UP WITH REGISTER BOOT CROSS-BAR TO ATTACH CEILING GRILLE TO BOOT. EASILY REMOVE JUST GRILLE TO CLEAN OR PAINT.**

**8 1/2" TEMPLATE**  
FOR LAYOUT AND POSITIONING  
ON CEILING

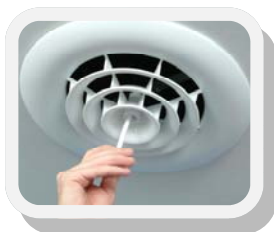

**ALSO AVAILABLE WITH DAMPER:** ON DAMPERED MODELS EASILY ADJUST DAMPER BY INSERTING ADJUSTMENT ROD UP THROUGH CENTER OF ATTACHMENT KNOB AND MANUALLY TURNING TO OPEN BUTTERFLY DAMPER. LEAVE ROD IN PLACE OR REMOVE AND INSERT PROVIDED PLUG IN TOP OF KNOB.