

Instructions for Updated Parts


Adjustable Corner Brackets

Orientation: During frame assembly, ensure the frame face with the triangular corner plates is facing **up** (top face).

Remove Screw: Unscrew and remove the center screw from the corner plate.

Position Bracket: Align the corner bracket so its center opening sits directly over the screw hole.

Secure: Re-insert and tighten the center screw to fasten the bracket in place.

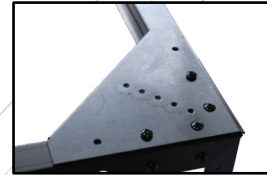

Elastic Cord

Cut the elastic cord into **6 total segments** with the following lengths:

2 x 76-inch segments

4 x 18-inch segments

Cord Inserts

Note: The kit includes **12 x Cord Inserts**.



Thread Cord: Thread the elastic cord through the CRFB frame as demonstrated in the instruction video.

Knot End: Tie a secure knot at the end of the elastic cord segment.

Attach Insert: Fit the knotted end snugly into a cord insert.

Secure: Press/lock the cord insert firmly into the CRFB frame slot.

